



Rear mounting bracket preparation


Plastic Rear Mounting Bracket For drawer length 229(9')

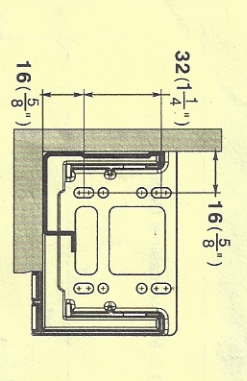



Plastic rear mounting bracket for drawer length 305(12'), 533(21')

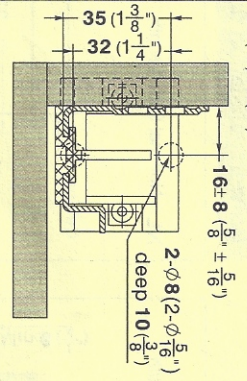

Metal Rear Mounting Bracket

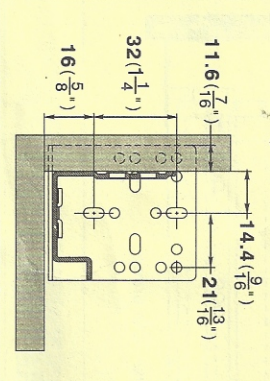


Screw Positions of the Slides

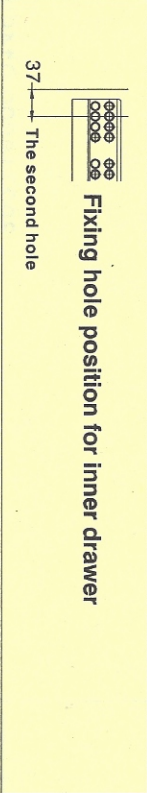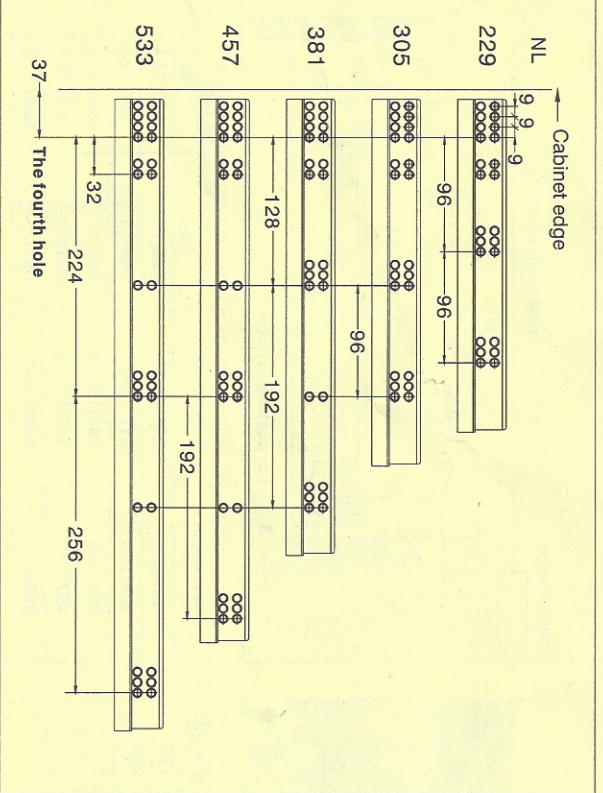


Drawer assembly and removal (with locking device)


1. Fix the locking device onto the drawer bottom and fix the rear bracket onto the cabinet back.

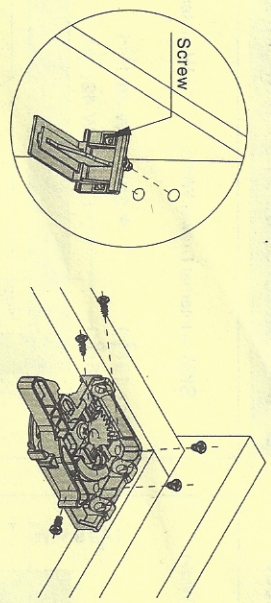


2. Fix the slide onto the cabinet.

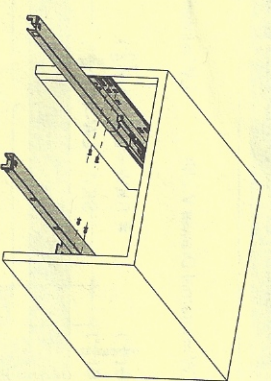

3. Lay the drawer bottom onto the slide then push the drawer into the cabinet.

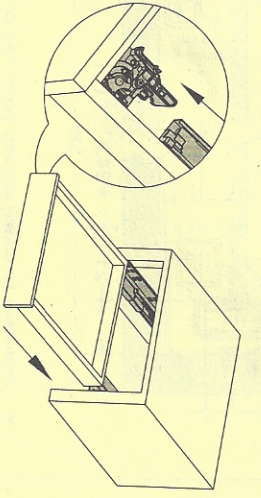


4. For removal, hold the handle and pull out the drawer.

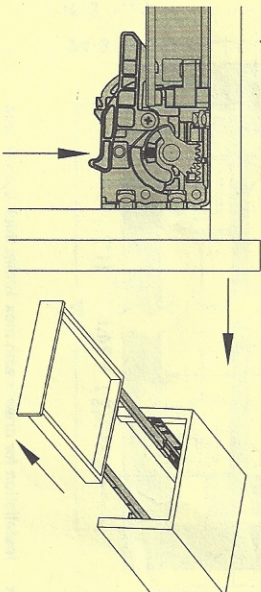


Drawer assembly and removal (with peg)


1. Fix the slide onto the cabinet and fix the rear bracket onto the cabinet back.

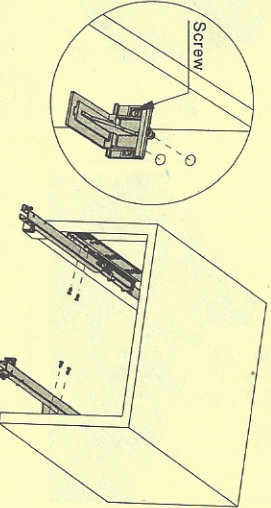


2. Pull out the drawer member of the slide from the cabinet, lay the drawer onto the slide.

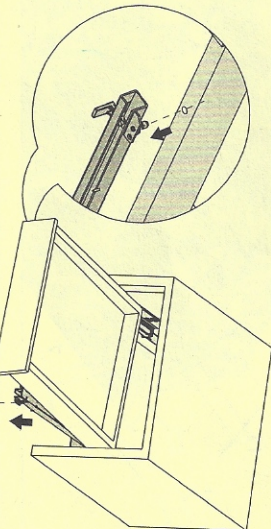

3. Press the locking pin into the drawer side to lock the position of the drawer.

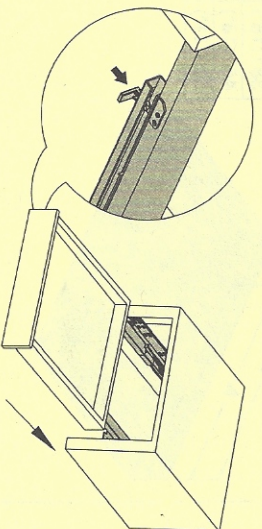


4. For removal, pull out the locking pin from the drawer side. Lift the drawer and pull it out from the cabinet.

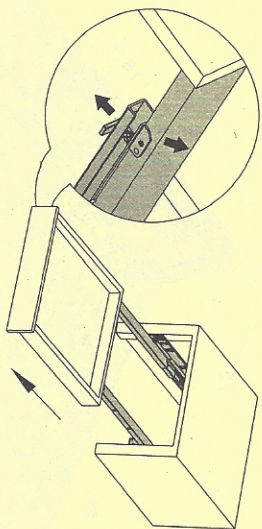


Rear mounting bracket preparation


Plastic Rear Mounting Bracket For drawer length 229(9")

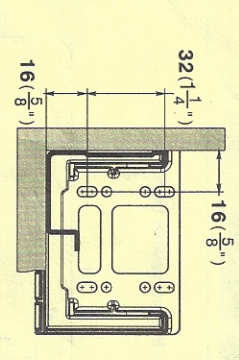


Plastic rear mounting bracket for drawer length 305(12")-533(21")

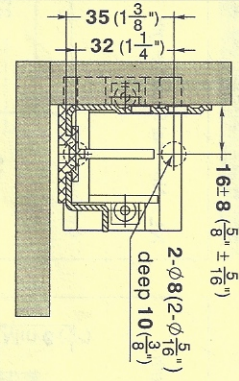


Metal Rear Mounting Bracket

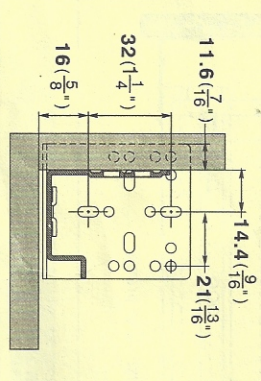

Screw Positions of the Slides

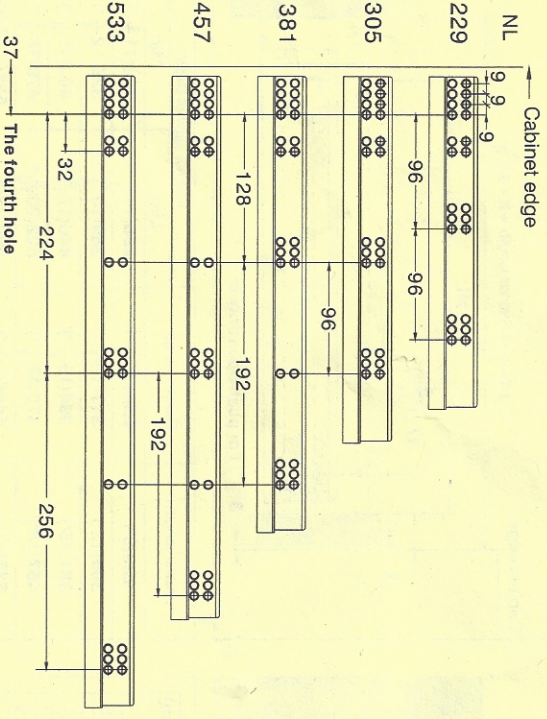


Fixing hole position for inner drawer




Drawer assembly and removal (with locking device)


1. Fix the locking device onto the drawer bottom and fix the rear bracket onto the cabinet back.

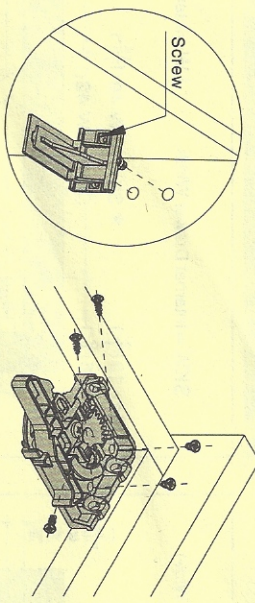


2. Fix the slide onto the cabinet.

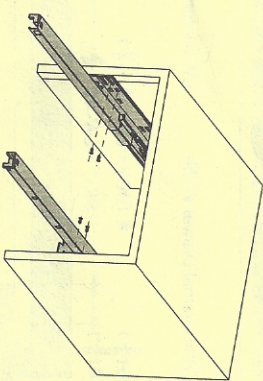

3. Lay the drawer bottom onto the slide then push the drawer into the cabinet.

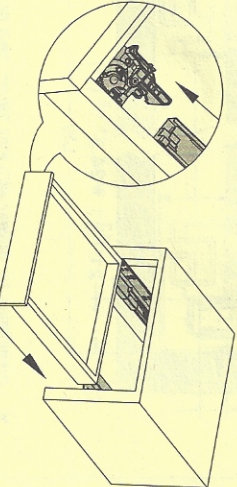


4. For removal, hold the handle and pull out the drawer.

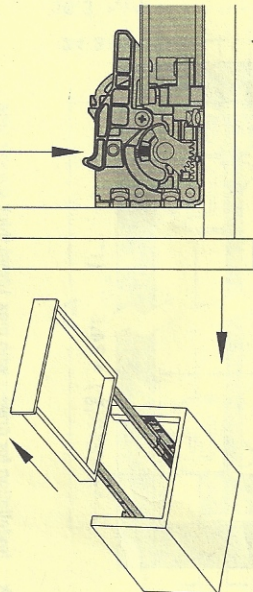


Drawer assembly and removal (with peg)


1. Fix the slide onto the cabinet and fix the rear bracket onto the cabinet back.

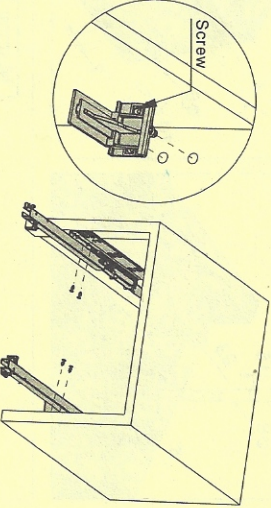

2. Pull out the drawer member of the slide from the cabinet, lay the drawer onto the slide.

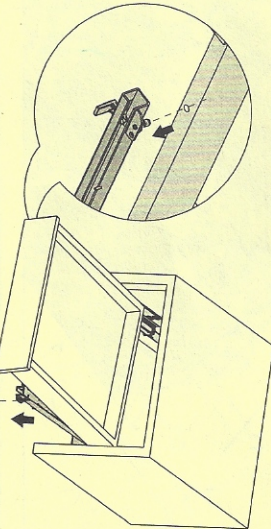

3. Press the locking pin into the drawer side to lock the position of the drawer.

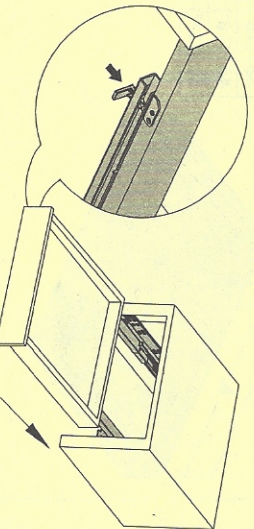

4. For removal, pull out the locking pin from the drawer side. Lift the drawer and pull it out from the cabinet.

